




Wiring Instructions for the  
ROFU 1005 (full wave bridge) rectifier

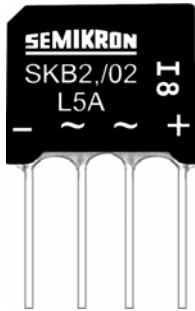

- To the Strike / Magnetic Lock
- ~ (both) To the power supply
- + To the Strike / Magnetic Lock, wire the release mechanism (button etc.) in the plus line.

**ROFU International Corp.**

10029 South Tacoma Way, Suite E-11  
Lakewood, WA 98499  
Ph. 800-255-7638 / Fax 253-922-1728  
[www.rofu.com](http://www.rofu.com) / [mail@rofu.ws](mailto:mail@rofu.ws)